

INSTALLATION GUIDE

MODEL #: EUHB-150W1050 / EUHB-240W1050

LED Commercial Fixture LED UFO High Bay Light



Questions?

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday E-mail: info@eurilighting.com



PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

WARNINGS

- Do not use the electric generator to test the LED lamp.
- Please abide by related country, regional and local law and regulations when installing this fixture.
- Please turn off the power before installation or maintenance.
- · Proper earth grounding is required to ensure safety.

Warning/ Avertissement

MIN 90°C SUPPLY CONDUCTOR.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


Important


- To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
- · Please wear gloves to avoid injury before installation.
- If smoke or fire is found in wires or led fixture during or after installation, please turn off the power immediately and notify relevant personnel.
- Please check if there is any damage during shipping. If so, please contact manufacturer immediately.
- Please read the installation instruction carefully to check whether all the accessories are complete. After confirmation, then install the fixture according to the installations.

WIRING DIAGRAM & INSTRUCTION

This led high bay light can be equipped with optional DC motion sensor, and is available with 1-1 OV dimming function, with following 3 dimming solutions:

- 1. 1-1 0V dimming,
- 2. Intelligent dimming with DC motion sensor,
- 3. Pre-install tool-free handling DC motion sensor dimming module, and choose dimming function freely.

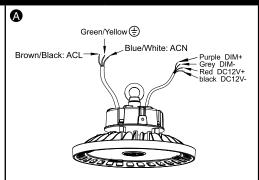

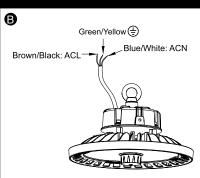

RECOMMENDED DIMMER LIST

LUTON: NTSTV-DV / LEVITON: DS710-10Z / LEVITON: IP710 / Legrand: RH4FBL3PW


INSTALLATION INSTRUCTIONS

Hook Mount, Ceiling Mount, 1/2"NPT Mount. (Please choose the most suitable installation method for the purchased product as per your needs)

HOOK MOUNT



Screw the hook into the fixture, tighten and fix into place.

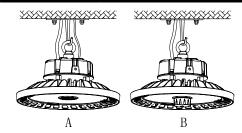

- 2 Hang the fixture on the ceiling hook or chain.
- After installation, connect the wire of the fixture to the main power source according to local wiring rules, ensure the connection is stable and connected wires are well protected.



INSTALLATION GUIDE

MODEL #: EUHB-150W1050 / EUHB-240W1050

LED Commercial FixtureLED UFO High Bay Light



Questions?

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday E-mail: info@eurilighting.com



LED UFO High Bay Light

PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION


CEILING MOUNT




Mark with a pen or sharp tool on the mounting surface and drill.



Fix screws into the holes with a hammer.

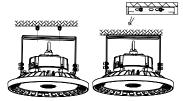

Align the bracket hole with screw hole, and push the fixture to one side and fix it.

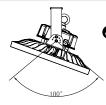


After installation, connect the wire of the fixture to the main power source according to local wiring rules, ensure the connection is stable and ensure the connected wires are well protected. By adjusting the brackets screws, users can vertically adjust 50° to the left or right.

1/2"NPT Mount



Unscrew the nuts on 1/2" NTP.

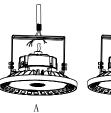

Insert 1 /2" NTP stem into the bracket hole.

В




Re-screw the nuts.



After installation, connect the wire of the fixture to the main power source according to local wiring rules, ensure the connection is stable and ensure the connected wires are well protected. By adjusting the brackets screws, users can vertically adjust 50° to the left or right.

INSTALLATION OF DC MOTION SENSOR

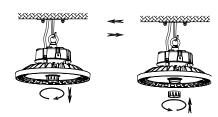

Motion sensor can be easily installed without using any tools. Choose whether to install the motion sensor or not as needed. If not, unscrew the motion sensor and replace it with a protection cover, and vice versa.

Note: the motion sensor has no dialing code, and a remote control is needed for adjustment. Please refer to the instruction for remote control adjustment.