




## Questions?

For customer service please call us at 1-310-787-1100  
Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday  
[www.eurilighting.com](http://www.eurilighting.com)

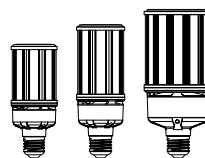

**LED Corn Bulb**  
27W / 63W / 120W

**PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION**

### WARNINGS

- This device is not intended for use with emergency exits or Not for emergency lighting
- Added weight of the device may cause instability of a free standing
- Portable luminaire
- Use only with a portable table lamp that is provided with a shade

### CAUTIONS

- Can not use the electric generator to test the LED lamp.
- Please avoid using the led fixture in environment where there is smoke, sulfur, and corrosive substances. But if used in such environment, make sure the led fixture is well protected by an enclosed lampshade whose dimension is no less than below size, and whose material is either glass or semi-glass, semi-metallic. Surface of the lampshade shall not have any covering which prevents heat dissipation.

Power(W)	12	18	27	36	45/54	63/80	100	120
Volume(CM)	30*18*18	32*19*19	34*20*20	38*20*20	42*21*21	42*23*23	44*24*24	44*26*26

### PRODUCT FEATURES

- The LED corn bulbs are designed with 3000K/4000K/5000K CCT adjustable function.
- The LED corn bulbs are designed with AC100-277V internal driver, and with continuous dimming function.
- Motion sensor or PIR sensor are optional for the 80-120W.
- 12-120W Sealant pouring for whole drive and lamp plastic housing.
- 12-63W meet 4KV surge immunity level, and 6KV for the 80-120W.
- Long lifespan and good heat dissipation, No fan design.
- Direct replacement for Metal Halide, easy Installation.
- Fits many different fixtures to replace traditional lamps.

### INSTALLATION INSTRUCTIONS

#### Warning: Please make sure the power is off before installation

1. Turn off the power switch.
2. Screw off the CFL or MHL or HPS and so on, see Figure (5) (6).
3. Take out led corn light and screw on, see Figure (1) (2) (3) (4).  
Figure (1) (2) (3) (4) : AC internal driver. (Note: Please make sure to take off the ballast before installing led corn light, otherwise the ballast will produce the resonance of high voltage and makes led corn light breakdown.)
4. If security rope provided, please fix the rope on the lamp with hand, then fix the wire of other end on the shell, see Figure(2) (4).
5. Lamp CCT and dimming can be adjusted after removing the top plastic cover with a screwdriver. Figure(5) (8).
6. Turn on the power switch. (Finished!)

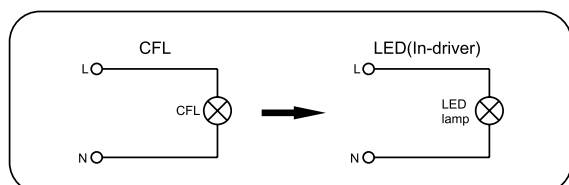
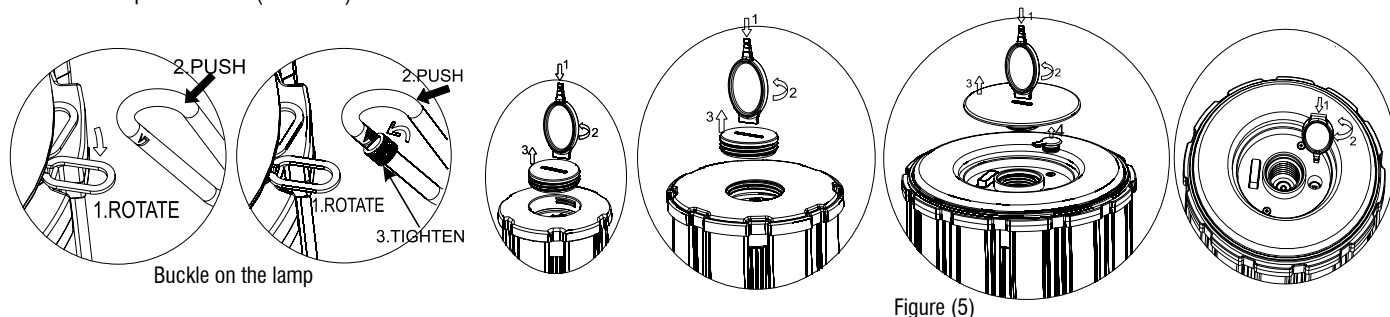
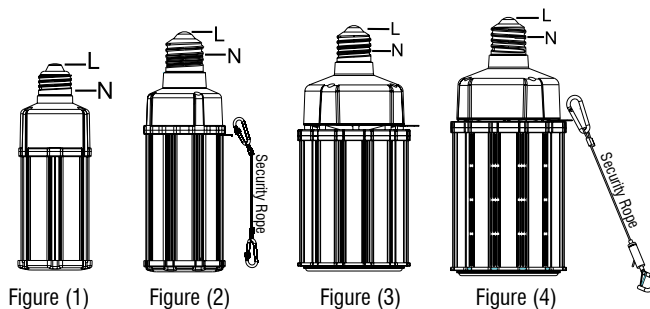


Figure (6)


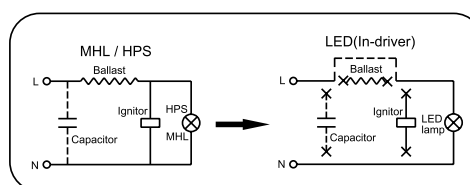


Figure (7)



## Questions?


For customer service please call us at 1-310-787-1100  
Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday  
[www.eurilighting.com](http://www.eurilighting.com)

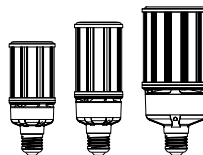


**LED Corn Bulb**  
27W / 63W / 120W

PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

### CCT ADJUSTABLE AND DIMMING MODE DIAGRAM

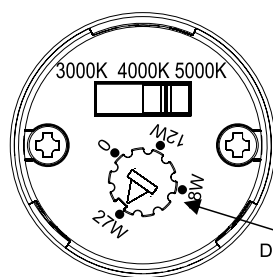

CCT Adjustable  
27-63W

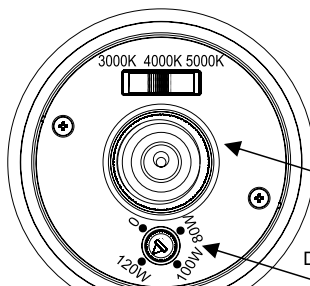

CCT Adjustable  
80-120W

Sensor interface  
with 0-10V continuous  
dimming function

DIMMING  
KNOB

### INSTALLATION OF MOTION SENSOR OR PIR SENSOR

It could be easily installed by using a straight screwdriver.  
Use a flat-blade screwdriver to unscrew the plug and remove the plug.  
And then, adjust the lamp power to the maximum (otherwise the sensor will act abnormally).  
Install motion sensor or PIR sensor and tighten it.

**Note: the motion sensor has no dialing code, and a remote control is needed for adjustment.  
Please refer to the instruction for remote control adjustment.**

